

Thank you for your order!

Instructions

ToughGrip

NEW Video tutorial: www.vimeo.com/386511555

No heat or professional installer required. Ideal for areas that will NOT be waxed or coated with sealers.

1. AREA *Tough Foil is not suitable for carpet applications*

- a. Choose a space indoors or outside, Tough Grip is excellent for any hard surfaces where increased longevity is needed and floor waxing is not feasible.
- b. Make sure the surface temperature is above:
 - i. **55°** Fahrenheit / **12°** Celsius.
- c. The area should be clean, dry and oil-free. Remove any loose debris from the area. Avoid curbs/gutters or areas with heavy water flow.
- d. The surface area must be dry for a minimum of **24 hours** before application.
- e. Avoid installing outdoors within 48 hours of precipitation or on very humid days. Do not install over large cracks or holes.



2. CUT

- a. Use sharp scissors and cut out each element.

3. CLEAN

- a. Once all elements have been cut and you are ready to apply, make sure the area is clean and dry.



4. PLACE

- a. Craft the entire layout by placing the (unpeeled) decals on the ground to visualize the path before installing.

5. PEEL


a. Small sticker: (1 Person)

- i. Peel the backing off the decal and lay it on the surface, press down from the middle of the sticker, outwards.
- ii. Ensure the entire sticker including the edges have adhered to the surface. Use a rubber roller or your hands protected with cotton gloves to apply pressure to the entire surface of the decal.
- iii. This can be accomplished by using a small rubber roller or even your fingers. This will ensure water does not undermine the adhesive properties of the decals



b. Large sticker: (2 - 3 Person)

- i. Peel the backing off about 2 inches from the narrow side of the decal.
- ii. While keeping that side pulled taut, apply it on the surface.
- iii. You can always peel away a try again to get it straight.
- iv. Once a straight edge has been applied, one person slowly pulls the loose backing further off exposing more of the sticker underside.
- v. The other person uses a rubber roller, squeegee or credit card to push down on the newly exposed sticker from the middle outwards.

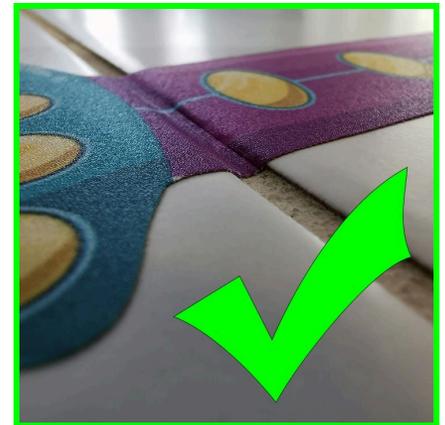

- c. Work slowly and avoid wrinkles by keeping the decal pulled tautly.



- d. Ensure the entire sticker including the edges have adhered to the surface.
- e. If installed over grout lines, please ensure the decal is conformed to the grout line. This can be accomplished by using a small rubber roller or even your fingers. This will ensure water does not undermine the adhesive properties of the decal.